

VEICHI FLink IOT Expansion Module

IOT-BS4.0-FLink




- 350+ Industrial protocol access, support most of the industrial equipment connection
- Complete data parsing locally and push data to the cloud server
- Support VEICHI remote management tool, support remote configuration, diagnosis
- Supports local caching of historical data

Product Specification

Hardware Parameter	Network Access	Ethernet Mobile2G/Unicom2G/Telecom2G Mobile3G/Unicom3G/Telecom3G Mobile4G/Unicom4G/Telecom4G
	Network Band	LTE FDD: B1/B3/B5/B8 LTE TDD: B38/B39/B40/B41 WCDMA: B1/B8 TD-SCDMA: B34/B39 CDMA: BC0 GSM: 900/1800MHz
Environmental requirement	Operating Temperature	-10~60°C
	Storage Temperature	-20~70°C
	Environmental Humidity	10~90%RH (Non-condensing)
	Seismic Resistance	10~25Hz (X、Y、Z Direction2G/30 minutes)
Mechanical indicator	Cooling Method	Natural air cooling
	Size	67.9mm×74.2mm×19.5mm (Antenna not included)
	Weight	About 55g
Software Parameter	Material	ABS Engineering Plastics
	VPN Pass-through	Support (only for the 6000 series with its own network port)
	Data Monitoring	300 points, support timed upload or change upload
	Alarm Push	100 points, support client push, SMS push (20 free messages per day), WeChat public number push
	Historical Data	30 points, support offline renewal, offline each point can store 5w bars, cloud retention 90 days

	Edge Computing	Support for script programming
	Network Protocols	Supports over a hundred industrial device protocols
	Management and Maintenance	Support remote firmware upgrade, support configuration file import and export

Size

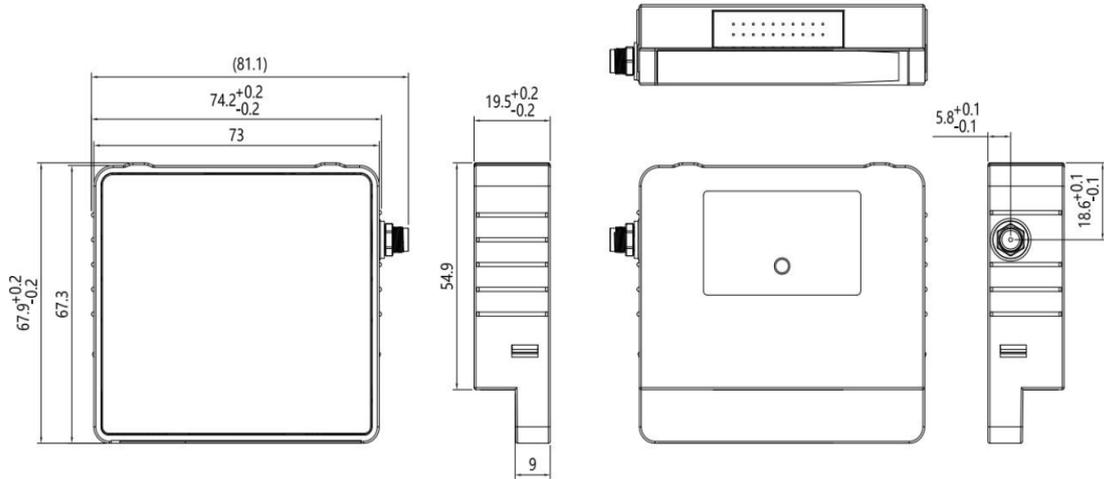

Installation method

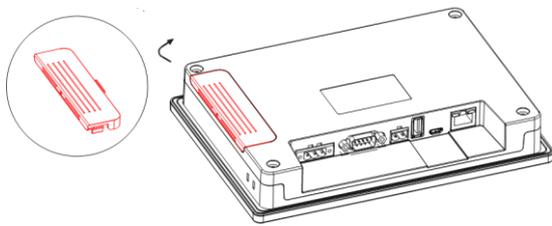


Figure 1-1

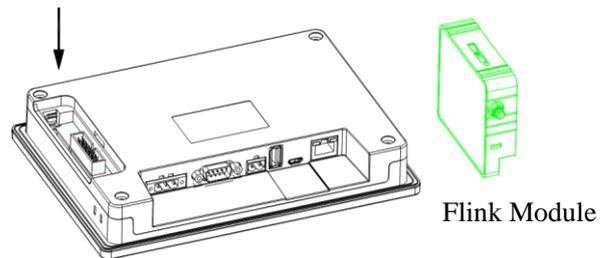


Figure 1-2

Complete the installation of Flink

Along the direction of force can be advanced, you can install a good snap

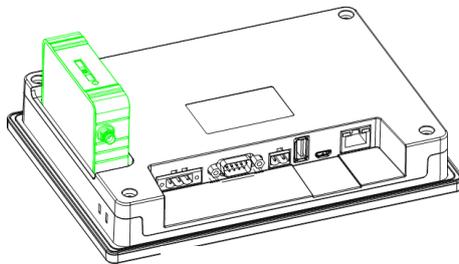


Figure 1-3



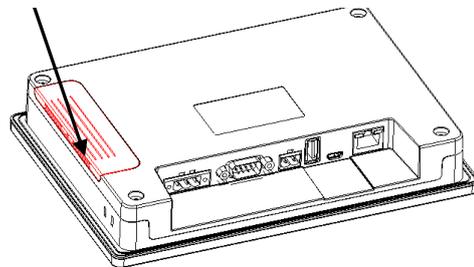


Figure 1-4


Aluminum structure HMI
back open the cover in the
direction shown

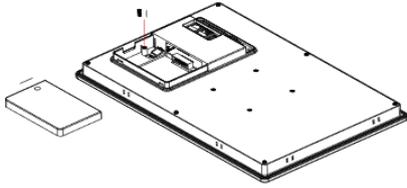

Complete the FLink
installation as shown in the
diagram

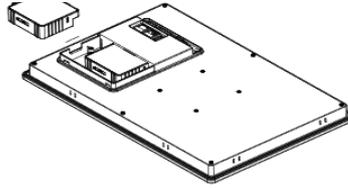

Install the cover to
reset and lock the
screws

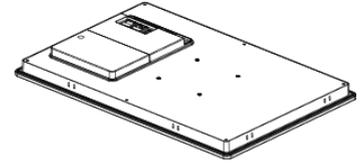

Contact us

Suzhou Headquarters

Address: NO.1000 Songjia Avenue,Guoxiang
Street,Wuzhong District,Suzhou,China

Phone: 0512-66171988

Fax: 0512-66173610

Shenzhen Branch

Address: No.1 Factory Building (Chunsheng Building),

No.1 Road, Leading Asia Industrial Park,

Tantou Community, Shiyan Street, Baoan

District, Shenzhen, China

Phone: 0755-36861688